

# vicrez.com

## Installation Instructions: Vicrez Nissan 350z 2003-2008 Ducktail Wing Spoiler vz100313

### Required:

- 3M VHB Double Sided tape
- Sandpaper
- Adhesive promoter
- Heat Gun, Heater, Fireplace, etc (If cold temperature only)



- 1 Sand down the tape line area. This will remove any mold release left over from the mold.




- 4 Use a heat gun to create flexibility. This allows the ducktail to easily mold onto the trunk of the vehicle.



- 2 After you're done with sanding, you will need to wipe down the tape line with adhesive promoter.



- 5 Slightly peel off the ends of the 3m tape. This will help you center the spoiler before fully attaching it.

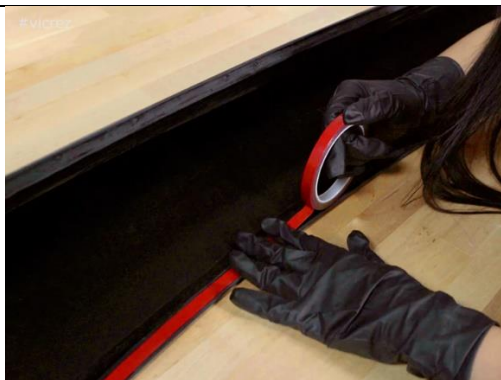

- 3 Now, start applying the 3m double sided tape along the tape line of the Vicrez ducktail.



- 6 Make sure to clean the surface of the installation area and then apply the adhesive promoter along the surface.




7 Push down on the spoiler to properly align. We recommend 3 people for this step. 1 on each corner and 1 in the middle. Hold for a least 5-10 minutes.



8 Congrats! You have successfully installed your Vicrez Ducktail on your car.

You can also follow along with our Video Installation on YouTube:

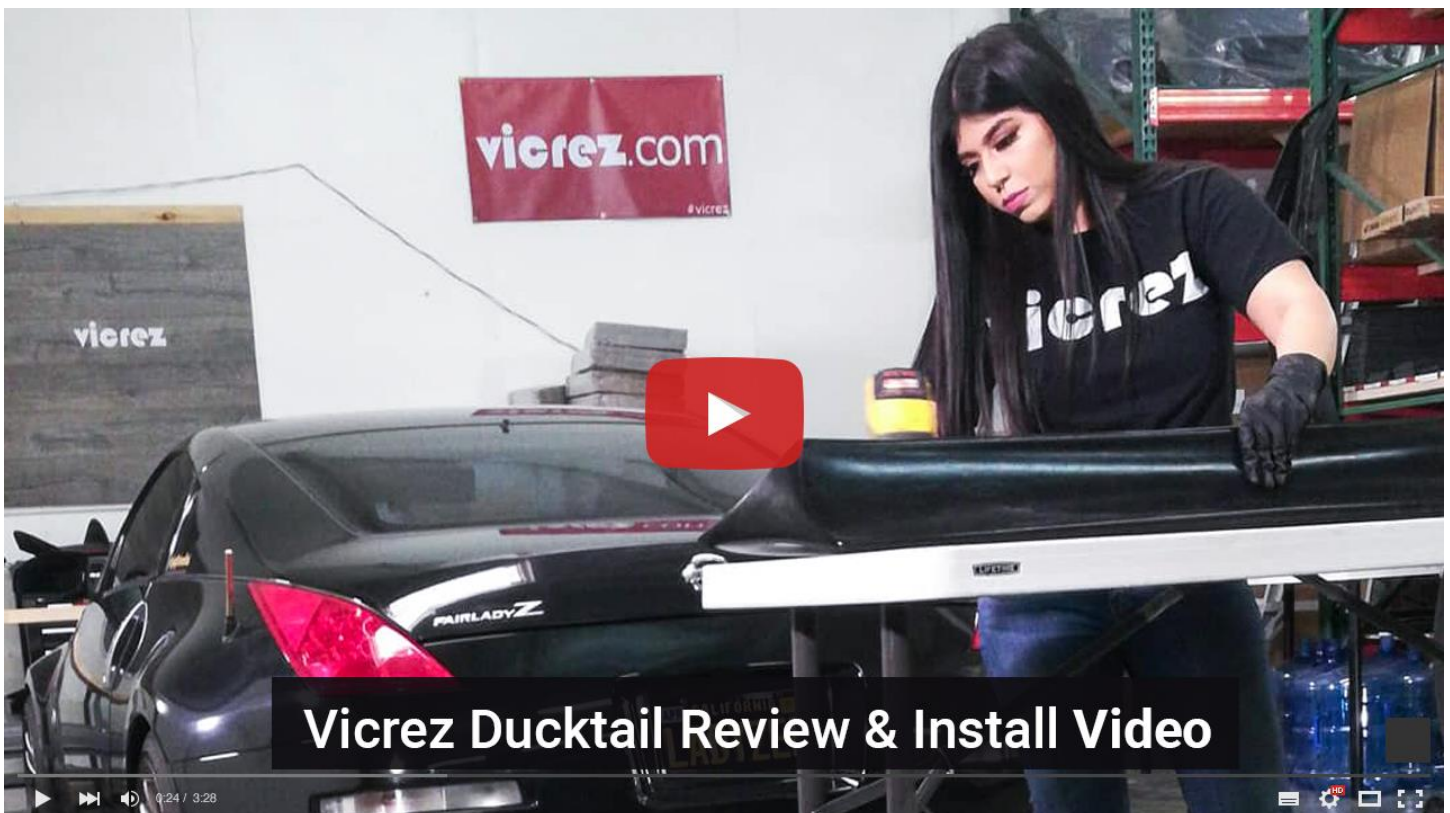

<https://youtu.be/snzjo6inQK4>

**Please note (Step 4):** Only applies if you live in a cold area or during winter - if the weather is between 60-70° or lower.

When polyurethane is stored in cold temperature it becomes a little stiff; therefore, we recommend to expose the ducktail to sunlight or any source of heat. You need to allow the ducktail to reach at least 90°-110° (Heat Gun, heater, or fireplace may be required)