

## Installation Instructions: [Vicrez Centa Rear Diffuser Add-on vz101071 for 2014-2019 Corvette C7](#)

### Required:


- 3M VHB Double Sided tape
- Adhesive Promoter
- Drill and Bits
- Brackets, Lug nuts, and Screws



- ❶ Remove the C7 rear bumper fascia. This will facilitate the installation process.



- ❷ Evenly mark the area where the fin add-ons will be installed.

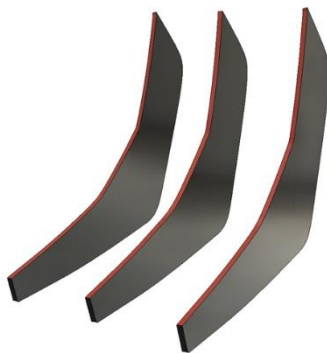

- ❸ Test fit the rear fin add-ons so you are familiar to how it fits.



- ❹ Align the fins to the surface of the rear fascia and mark the holes with an easy to remove marker.



- ❺ Drill the holes for the rear add-on fins and the rear fascia where you have previously marked.



- ❻ Clean thoroughly the rear facias and apply adhesive promoter to the rear fascia surface.



7 Peel off the 3M tape backing and apply firm pressure to tape locations to ensure proper adhesion.



8 Now, proceed to install the add-on fins onto the rear fascia using the hardware provided.

**Congrats! You have successfully installed your Vicrez Centa Rear Diffuser on your C7.**



For more awesome products for your vehicle, be sure to visit our website at [Vicrez.com](https://www.vicrez.com)