

Installation Instructions: [Vicrez Genali Rear Diffuser Add-on vz101400 | Corvette C7 2014-2019](#)

Required:

- 3M VHB Double Sided tape
- Adhesive Promoter
- Drill and Bits
- Brackets, Lug nuts, and Screws




- 1 Remove the C7 rear bumper fascia. This will facilitate the installation process.




- 4 Align the fins to the surface of the rear fascia and mark the holes with an easy to remove marker.



- 2 Evenly mark the area where the fin add-ons will be installed.

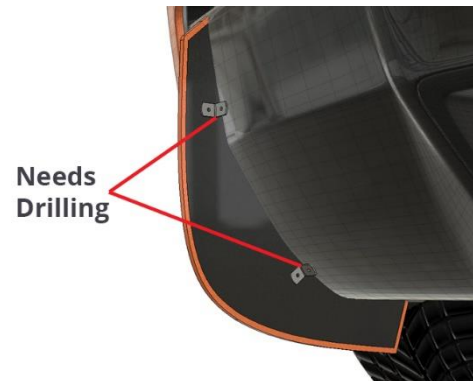

- 5 Drill the holes for the rear add-on fins and the rear fascia where you have previously marked.

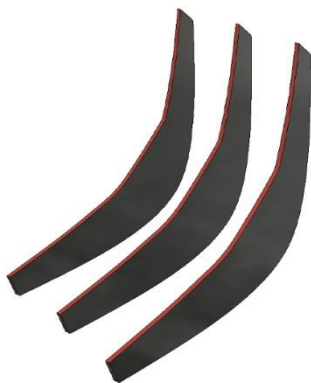

- 3 Test fit the rear fin add-ons so you are familiar to how it fits.



- 6 Clean thoroughly the rear facias and apply adhesive promoter to the rear fascia surface.



7 Peel off the 3M tape backing and apply firm pressure to tape locations to ensure proper adhesion.



8 Now, proceed to install the add-on fins onto the rear fascia using the hardware provided.

Congrats! You have successfully installed your Vicrez Centa Rear Diffuser on your C7.



For more awesome products for your vehicle, be sure to visit our website at [Vicrez.com](https://www.vicrez.com)