


**Installation Instructions:** [Vicrez Vesper Rear Side Add-On vz101418](#) | [Chevrolet Corvette C7 2014-2019](#)

**Required:**

- 3M VHB Double Sided tape (Optional)
- Adhesive Promoter
- Drill
- Self-tapping screw

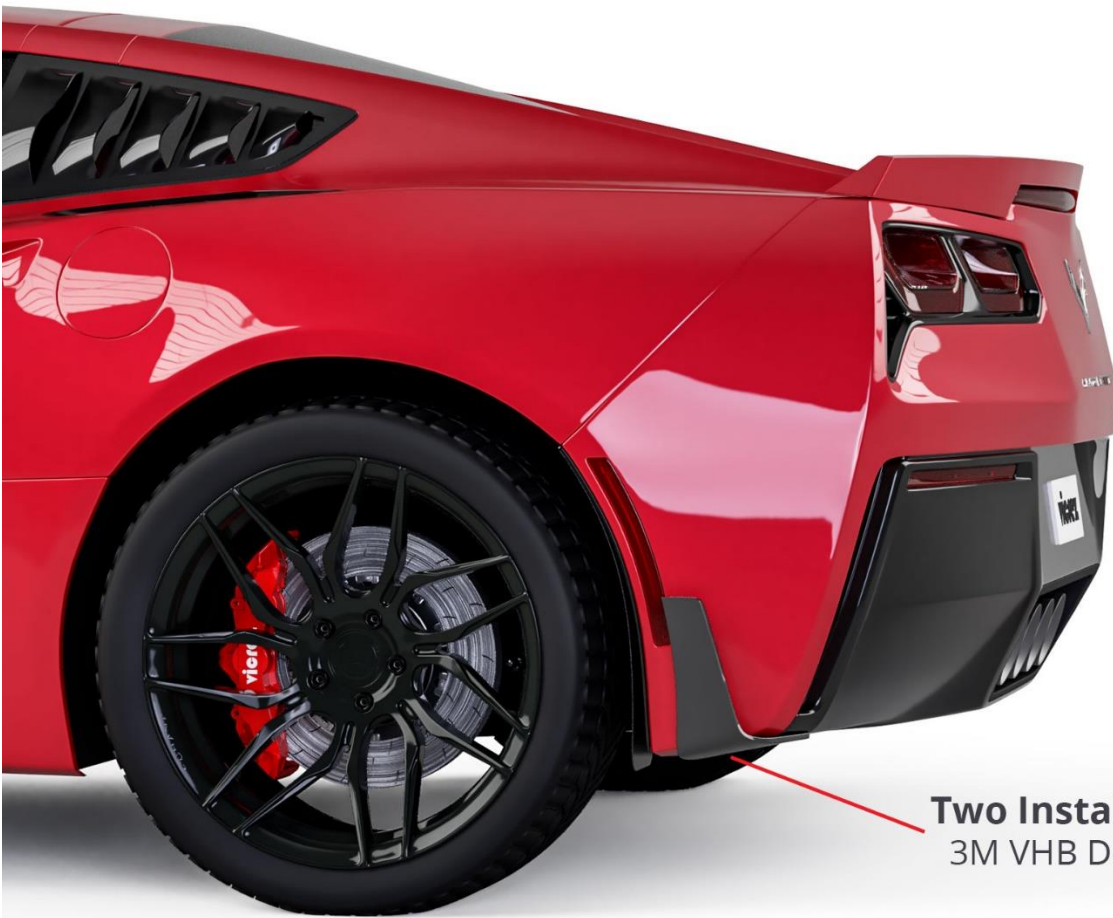

**Two Installation Options:**  
3M VHB Double Sided tape  
or  
Self Tapping Screws (Included)

For more awesome products for your vehicle, be sure to visit our website at [Vicrez.com](https://vicrez.com)