

## Installation Instructions: Vicrez VZR1 Front Bumper Lip Splitter vz101671 | Corvette C8


### Required:

- Drill and Bits 3/16

- Brackets, Lug nuts, Screws, & Self-Tapping Screws (Included)



**(1)** Install the winglets with the hardware provide (screws, nuts, & brackets)

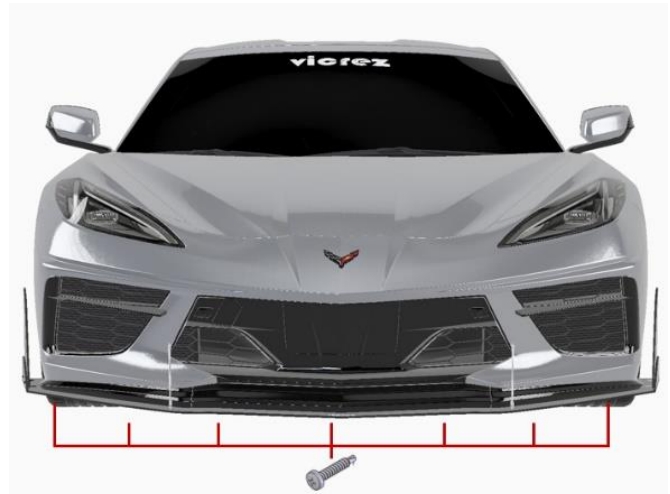

**(2)** Align the splitter w/ bumper & proceed to install front splitter using drilling screws or existing OEM hardware



**(3)** Support rods can be installed in any placement of the bumper. However, it is not required for installation



**(4)** Final result – how the front splitter should look

For more Corvette C8 products for your vehicle, be sure to visit [Vicrez.com](https://www.vicrez.com)