


Installation Instructions: Vicrez VZR1 Side Splitter vz101672 | Corvette C8


Required:

- Drill and Bits

- Brackets, Lug nuts, Screws, & Self-Tapping Screws (Included)

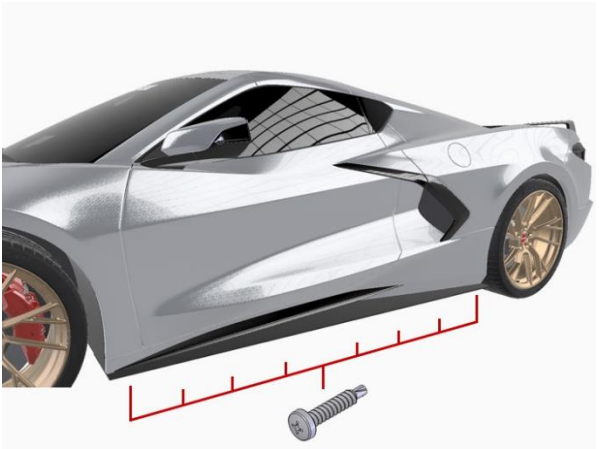

(1) Align splitter w/ rocker panel & proceed to install side splitter using self-drilling screws or hardware of your preference

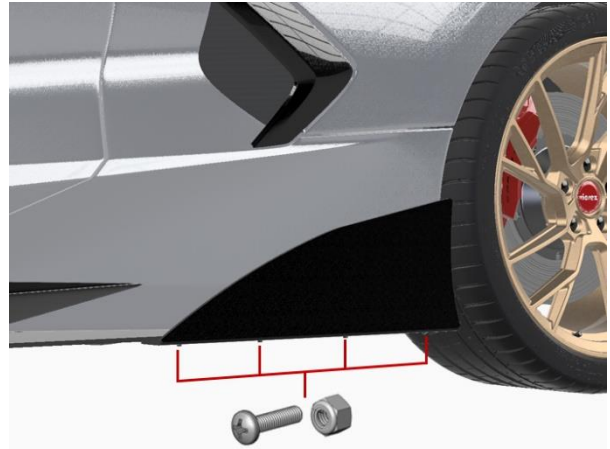

(2) After installing side splitter, proceed to drill holes on side splitter in order to install the winglets using the provided hardware



(3) Final result – how the side splitter should look

For more Corvette C8 products for your vehicle, be sure to visit [Vicrez.com](https://www.vicrez.com)